
INSTALLATION INSTRUCTIONS

STEP 01

Use a stud finder map mounting locations. Then proceed to trace a level guideline to use as a guide of where to place your panel.

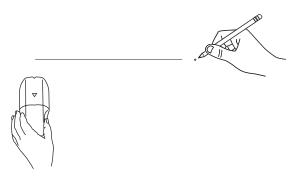


STEP 02


Place backer panel against wall in desired location.



03

Use a level and 1/8" drill bit to mark mounting holes, and drill the pilot holes.

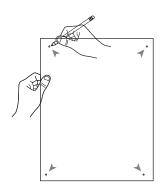


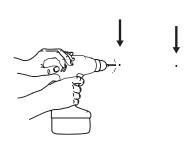

STEP

04


Drill drywall anchors into wall then mount backer panel with wood screws; if not mounting into drywall, directly secure the panel into stud with wood screw.

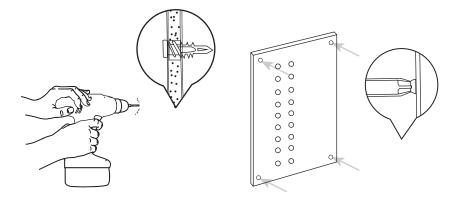

STEP


05

Remove protective film from the faceplate. (If applicable)

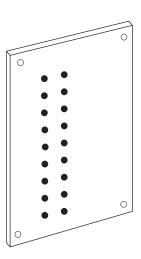

STEP 06

Plug & Play. Line up the faceplate and backer panel holes then proceed to secure the faceplate using the provided Ultra PEGs.



STEP 07

Congratulations! You have completed your Fusion Wine Wall Panel installation. Now it's time to pop a cork, sit back, and admire your handy work.







ULTRA FUSION HZ WINE WALL (3FT) INSTALLATION GUIDE

Important! Before installing Pegs do the following:

1. Check the Package Contents for missing or damaged items Contact Customer Service at 1-(800) 343-9463 Ext: 802 for questions or concerns

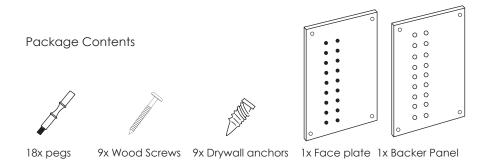

Recommended Installation Tools (Not Included)

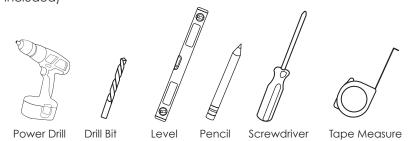

Recommended Fusion Applications:

Drywall anchors (included) - Use for installing rails to drywall if studs are not present in the desired location. Do not use drywall anchors to secure into a wall stud location.

Wood Screws (included) - Use wood screw to secure wall studs or wood panels, do not use on drywall without securing to a stud. Concrete or Masonry applications not provided.

Concrete, Brick or Stucco (Not Included) - 3/16" x 1-1/4" Masonry Screw or #8x1-1/4" screw with the proper concrete anchors.